



Texas Agricultural Extension Service
The Texas A&M University System

Reducing the Risk of Ground Water Contamination by Improving Milking Center Wastewater Treatment

B.L. Harris, D.W. Hoffman and F.J. Mazac, Jr.*

1. Do you dispose of milking parlor waste (manure, feed solids, hoof dirt) or milk house wastewater (bulk tank rinses or cleaning operations) on your property?
2. Do you apply dairy wastewater without considering the soil nutrient levels or types of crops to be grown?
3. Do you allow dairy wastewater to run off quickly and uncontrolled during field applications?
4. Do you rarely or never harvest crops from acres where dairy wastewater has been applied?
5. Do you continue to apply dairy wastewater to areas already saturated by previous applications?
6. Is your slow dairy wastewater system located on sandy soils?
7. Is your dairy wastewater system located where bedrock or the top of the water table is less than 12 feet from the soil surface?

If these questions create doubt about the safety of your management practices, this publication will provide helpful information.

*Professor and Extension Soils Specialist; Research Scientist, Texas Agricultural Experiment Station; Extension Associate-Water Quality, The Texas A&M University System.

Milking Center Wastewater Treatment

Dairy wastewater is usually considered a dairy sanitation problem. If not carefully managed, however, dairy wastewater can contaminate both ground water and surface water. The amount of wastewater generated varies with milking preparation, equipment use, and the number of cows.

Milking center wastewater is contaminated with organic matter, nutrients, chemicals and microorganisms. Poorly designed or mismanaged waste disposal systems can contaminate water with ammonia, nitrate, phosphorus, detergents and disease-causing organisms. These contaminants can be carried directly to a well or cause ground water or surface water pollution. Surface water also can be affected by manure, milk solids, ammonia, phosphorus, and detergents. Wastewater from the dairy milking center is made up of waste from the milking parlor (manure, feed solids, hoof dirt, bulk tank rinse water and detergent used in cleaning), and should be collected in a waste storage facility.

From an environmental perspective, delivering milking center wastewater to a waste storage facility makes the most sense. Discharging it from channels, lagoons, ditches, pipes or irrigation systems is illegal. It is also illegal under Texas Natural Resources Conservation Commission (TNRCC) regulations to allow wastewater to be discharged off your property.

A glossary at the back of this publication will assist with terminology. This publication covers the following topics:

1. Combining wastes
2. Application methods
3. Slow surface infiltration

Combining Wastes

When milking center wastes are combined with manure a common disposal system can be used for both types of waste. A liquid manure storage facility, properly constructed and sized, can store wastes until they can be applied at the right time to the right sites (see Figure 1).

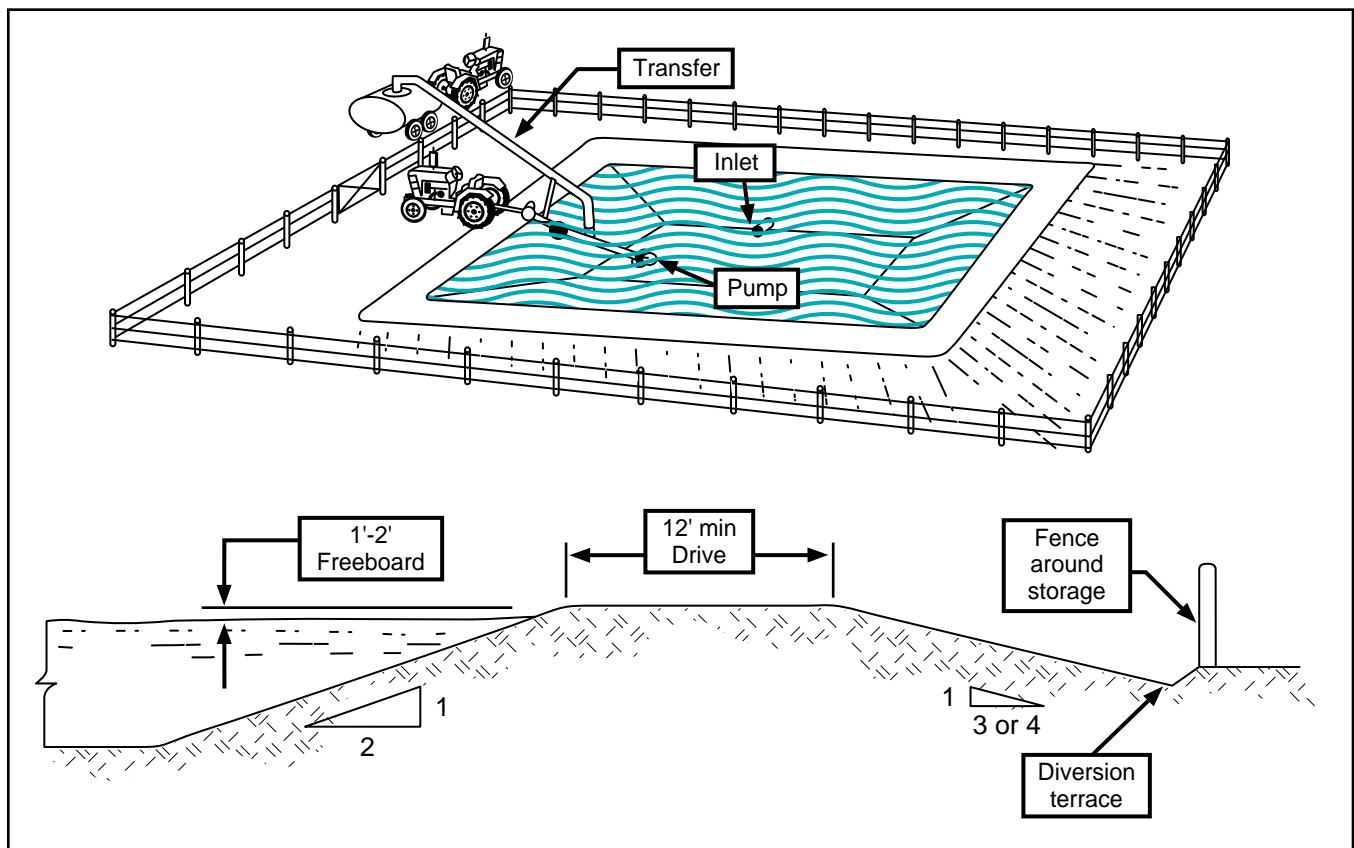


Figure 1a. Earth basins for manure and dairy wastewater storage. Source: Dairy and Equipment Housing Handbook, MWPS-7, Midwest Plan Service, Ames, Iowa.



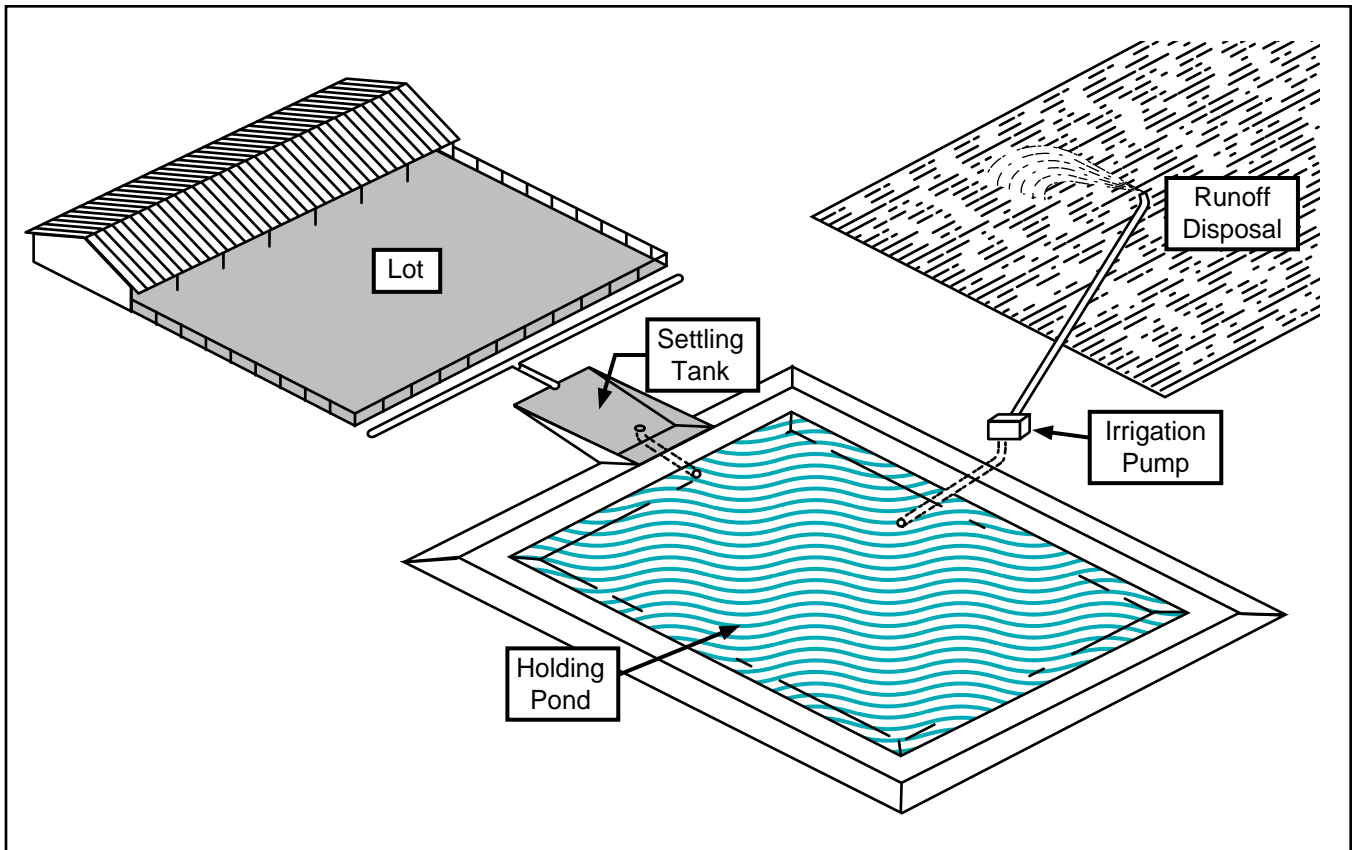


Figure 1b. Detention pond for storage of dairy wastewater and livestock yard runoff. Source: Dairy and Equipment Housing Handbook, MWPS-7, Midwest Plan Service, Ames, Iowa.

The best disposal method, environmentally, is to apply milking center wastes with manure to fields, at rates that do not exceed crop needs for nitrogen. However, the producer must be careful to keep soil phosphorus levels from becoming excessive.

Milking center wastewater combined with feedlot runoff or leachate (from manure storage) can be stored in a detention pond. The contents of the pond can be applied to fields when conditions are appropriate.

Application Methods

Any application of wastes to the soil surface should be based on the nutrient needs of the crop to be planted, as determined by a soil analysis. Nutrients in waste reduce the need for commercial fertilizer.

Dairy wastewater can be applied to cropland and pastures by irrigation equipment. Or, pipes with sprinklers can be permanently installed to spray wastewater over a certain

area consistently. Determine the application rate by:

- 1) the soil's ability to absorb the liquid in the wastes; and
- 2) the amounts of nutrients that can be used by vegetation, with periodic harvesting of the crop produced.

Do not saturate any area with wastewater because that can allow rapid percolation of contaminants to ground water or runoff to surface water.

Milking center wastewater applied to cropland at low rates poses little danger to ground water because it is filtered by the soil and used by plants. To maximize the efficiency of this system, harvest the crop or other vegetation periodically and feed it to livestock, if appropriate, or use it as bedding. If the crop is left on the ground, nutrients may still move into ground water. Forest, windbreak or wood lot application may also be suitable, in which case harvesting is not necessary.



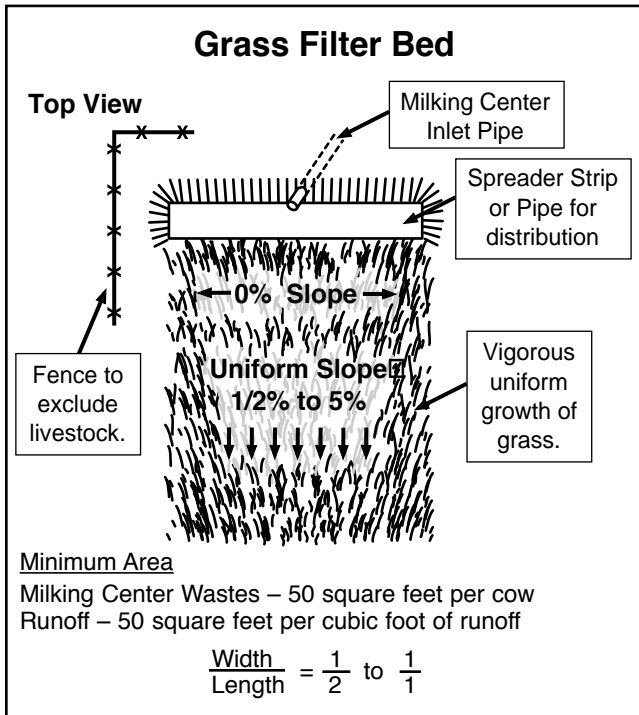


Figure 2. Surface flow (overland). Source: Dairy Manure Management-Handling Milk Center Wastes, Northeast Dairy Practices Council 27.B. October 1977.

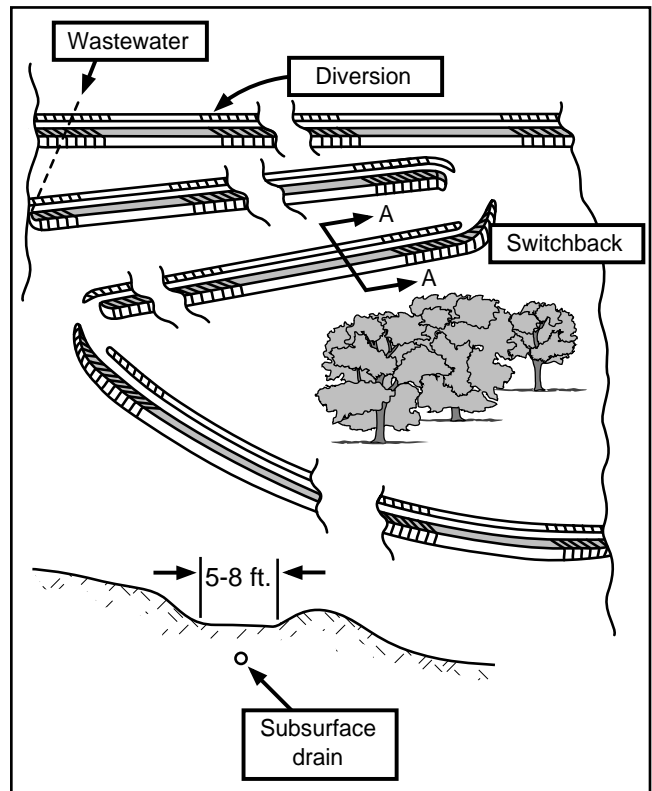


Figure 3b. 1-2% infiltration terrace. Source: Milking Center Wastewater Disposal, Manure Management for Environmental Protection, Document DM7, Pennsylvania Department of Environmental Resources, October 1986.

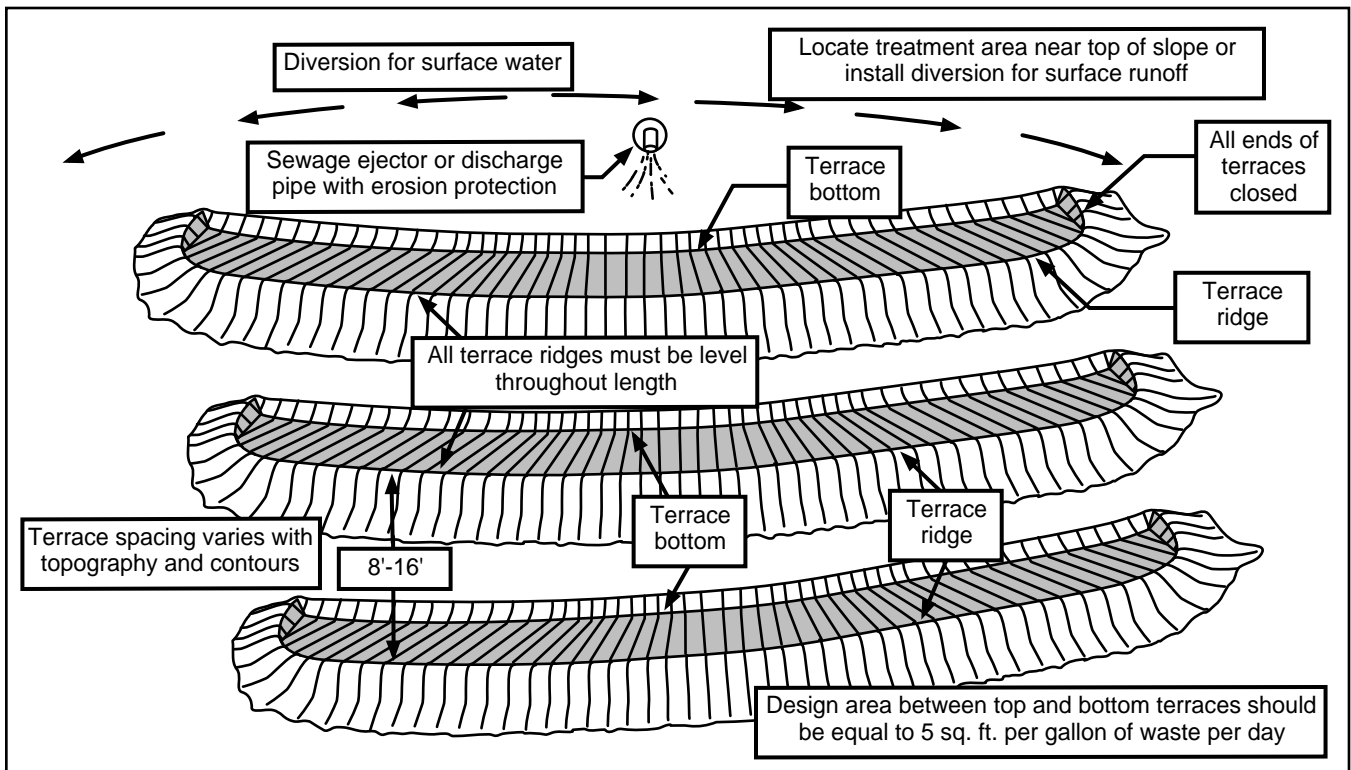


Figure 3a. Contour terraces. Source: Treatment and Disposal of Milkhouse and Milking Parlour Wastes, D.W. Bates and R.E. Machmeier, University of Minnesota Agricultural Extension Service, M-159-1977.



Wherever wastewater is applied, the retention structure must be large enough to handle several days' production of milking center wastes so that no application area becomes saturated. Alternating between two waste disposal areas is a good way to allow an area adequate time to dry out.

Evaluation Table

The following table can be used to help agricultural producers and rural homeowners

determine the risk level that drinking water on a given property will become contaminated as a result of the management practices being used. For each category listed on the left that is appropriate, read across to the right and circle the statement that best describes conditions on your land. Allow 15 to 30 minutes to complete the worksheet, and skip any categories that do not apply. Note any high risk ratings and take appropriate actions to remedy them. Strive for all low or low-moderate risk ratings.

Milking Center Wastewater Treatment: Assessing Drinking Water Contamination Risk				
	Low Risk	Low-Moderate Risk	Moderate-High Risk	High Risk
No Discharge Methods				
All wastewater to manure storage with waste applied to fields	Wastewater delivered directly to liquid manure storage. No discharge expected.	_____	_____	Wastewater delivered to leaking manure storage.
Total evaporation lagoons	Lined lagoon professionally designed. Regularly maintained. More than 300 feet from well.	Lined lagoon professionally designed. Not maintained. More than 300 feet from well.	Lagoon lined but not maintained. Less than 300 feet from well.	No liner, no maintenance. Less than 300 feet from well.
Milking cleanup practices	First pipeline rinse captured and added to barn manure. Waste milk never poured down drain. Manure and excess feed always removed before washdown.	Waste milk sometimes poured down drain. Manure and excess feed usually removed before washdown.	Waste milk frequently poured down drain. Manure and excess feed often washed down drain.	All waste milk poured down drain. Manure and excess feed frequently washed down drain.
Pretreatment method	Includes solids separator and lagoon storage.	_____	Some solids separation by storage and settling.	No storage or settling. Untreated wastewater discharged to soil.
Location of Disposal Areas				
Distance from drinking water	More than 250 feet downslope from well.	More than 250 feet upslope from well.	Less than 250 downslope from well.	Less than 250 feet upslope from well.



Milking Center Wastewater Treatment: Assessing Drinking Water Contamination Risk				
	Low Risk	Low-Moderate Risk	Moderate-High Risk	High Risk
Application Methods				
Irrigation application	System professionally designed and constructed. Nitrogen levels of effluent regularly checked and credited to waste utilization plan. Discharged to growing crop on a regular basis. Vegetation regularly removed. Annual soil tests.	Sprinkler system professionally designed and constructed. Nitrogen levels sometimes checked and credited to waste utilization. Vegetation removed on a regular basis. Soil test performed.	Not a professionally designed system. Nitrogen levels not regularly checked or credited to waste utilization plan. Vegetation regularly removed. No soil test.	Not a professionally designed system. Nitrogen levels not checked or credited to crop fertilizer plan. No discharge plan. Vegetation not removed. No soil test.
OR				
Surface irrigation	Combined with high-level pretreatment. Medium- or fine-textured soil (silt loam, loam, clay loams, clay), more than 10 feet to water table or bedrock. Extended rest period between loadings. Vegetation removed. Annual soil test.	Combined with high-level pretreatment. Medium- or fine-textured soil (silt loam, loam, clay loams, clay), more than 3 feet to water table or bedrock. Extended rest period between loadings. Vegetation removed. Annual soil test.	Some pretreatment. Medium- or fine-textured soil (silt loam, loam, clay loams, clay) more than 2 feet over bedrock or high water table. Vegetation not removed. No soil test.	No pretreatment. One foot of medium- or fine-textured soil (silt loam, loam, clay loams, clay) above bedrock or high water table. Vegetation not removed. No soil test.

Glossary

Aerial application: Method of field application using pressurized sprinkler nozzles to broadcast wastewater in droplet form to the soil.

Field application: Application of wastewater to croplands and pastures by irrigation ditches or equipment.

Slab separator: A type of settling tank used for removing fine particles and sand from wastewater prior to pumping into a holding tank or lagoon.

Slow surface irrigation: Application of wastewater to level or gently sloping fields to provide nutrients for actively growing crops.

Soil permeability: The quality that enables the soil to transmit water or air. Fine (heavy) soils such as clay are slowly permeable. Coarse (light) soils such as sand are highly permeable.

Solids separator: A screen apparatus over which milkhouse wastewater slurry is passed, allowing liquids and fine particles to pass through while retaining larger solids.



Contacts and References

Who to call about certain problems or questions:

- ★ Potential ground water contamination from your milking center wastewater: Your county Extension agent, your local Natural Resource Conservation Service, or the Texas State Soil and Water Conservation Board.
- ★ Financial assistance for the cost of new waste handling facilities: Your county Consolidated Farm Service Agency, Natural Resource Conservation Service, or Texas State Soil and Water Conservation Board.
- ★ Review of construction plans: To be sure that water quality regulations are being met, contact the Texas Natural Resource Conservation Commission (512) 239-1000.
- ★ Securing a permit: Before committing to a new facility, contact the Texas State Soil and Water Conservation Board (817) 773-2250.
- ★ Designing a wastewater treatment system: The Natural Resource Conservation Service, private consultants, or the Agricultural Engineering Department, Texas A&M University, College Station (409) 845-7451.



TEX*A*Syst is a series of publications to help rural residents assess the risk of ground water pollution, and to describe Best Management Practices (BMPs) that can help protect ground water. The TEX*A*Syst documents were developed from the national Farm*A*Syst ground water protection program. The TEX*A*Syst system is designed to help the user learn more about the environment, existing environmental policies and regulations, and recommended management practices. Thus, the user can voluntarily reduce the pollution risks associated with water wells.

TEX*A* Syst materials were edited by Anna Schuster Kantor, and reviewed by M.C. Dozier and the personnel of the USDA-Natural Resources Conservation Service, U.S. Environmental Protection Agency, Texas Department of Agriculture, Texas Natural Resource Conservation Commission, Texas Water Development Board, Texas State Soil and Water Conservation Board, Texas Water Resources Institute, and Texas Farm Bureau. Editorial and formatting assistance were provided by the Department of Agricultural Communications, The Texas A&M University System.

The TEX*A*Syst program is sponsored by the U.S. Environmental Protection Agency under Section 319(h) of the Clean Water Act. Funds for this program are administered by the Texas State Soil and Water Conservation Board's Agricultural/Silvicultural Nonpoint Source Management Program.

Educational programs of the Texas Agricultural Extension Service are open to all people without regard to race, color, sex, disability, religion, age or national origin.

Issued in furtherance of Cooperative Extension Work in Agriculture and Home Economics, Acts of Congress of May 8, 1914, as amended, and June 30, 1914, in cooperation with the United States Department of Agriculture. Zerle L. Carpenter, Director, Texas Agricultural Extension Service, The Texas A&M University System.